





16+
age

Instructions For Use


V1.0

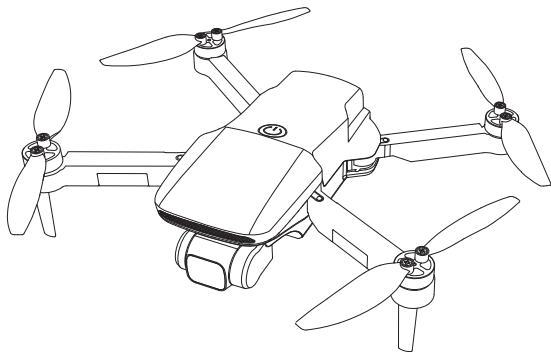

HS360

 +1(855) 888-6699

 www.holystone.com

 usa@holystone.com (USA) eu@holystone.com (EU)
ca@holystone.com (CA)

Contents

1.0 Disclaimer & Warning	01
2.0 Safety Guidelines	01
3.0 Maintenance	05
4.0 Package Contents	06
5.0 Drone Details	07
6.0 Transmitter Details	
6.1 Transmitter Functions	08
6.2 LCD Screen	09
7.0 Joystick Mode	10
8.0 Installation	
8.1 Drone Battery	11
8.2 Propellers	12
8.3 TF Card	13
8.4 Arms	13
8.5 Phone Holder.....	14
8.6 Antenna	14
8.7 Transmitter Battery	15
9.0 Charging	
9.1 Drone Battery	16
10.0 Operation Guide	
10.1 Download APP	17
10.2 Connect to Wi-Fi	17
10.3 Pairing	18
10.4 Calibrating the Compass	19
10.5 GPS Searching	20
10.6 Calibrating the Gyro	21
10.7 Starting/Stopping the Motors	21
10.8 Takeoff/Landing	22

11.0 Functions Details	
11.1 GPS Mode Switch	23
11.2 Speed Switch	23
11.3 Emergency Stop	24
11.4 Take Photo/Record Video	24
11.5 Gimbal Dial	25
11.6 Return to Home(RTH)	26
12.0 APP Operation Instruction	
12.1 Operation Interface	29
12.2 Beginner Mode	32
12.3 Follow Me	33
12.4 Waypoint Mode	34
12.5 Point of Interest	35
12.6 Take Photo/Record Video	36
13.0 Specifications	37
14.0 Trouble Shooting	40
15.0 Contact Us	41
16.0 General Information	42

1.0 DISCLAIMER & WARNING

1. Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product. This product is not recommended for people under the age of 16. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and any damages caused while using this product, and its consequences. You agree to only use this product for its designed purposes and in accordance with the local laws, regulations and all applicable policies and guidelines that Holy Stone may provide.

2. When using this product, please be sure to strictly abide by the specification requirements and safety guidelines stated in this document. Any personal injury, property damage, legal disputes and all other adverse events caused by the violation of any of the safety instructions or due to any other factor, WILL NOT be Holy Stone's responsibility.

2.0 SAFETY GUIDELINES

2.1 Check Before Use

- ① This product is a high precision drone that integrates various electronic stability and control mechanisms. Please be sure to configure this drone carefully and correctly to ensure safe, accident-free operation.
- ② Ensure that the batteries of the drone and transmitter are clean, undamaged, and fully charged before every use.
- ③ Ensure that all the propellers are undamaged and are installed in the correct orientation.

④ Please perform a thorough check of the product before each use. Inspect the integrity of the parts, any signs of cracks and wear off on the propellers, battery power and effectiveness of the indicator, etc. If after doing a complete check of the drone any problems are found, please refrain from using it until the problem has been resolved.

2.2 Flight Environment



+



+



Fly in Open Areas

**Maintain Line
of Sight**

**Fly Below
394 feet (120 m)**



Avoid flying over or near obstacles, crowds, high voltage power lines, trees, airports or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



DO NOT use this drone in adverse weather conditions such as rain, snow, fog, and wind.

2.3 Operation Requirements

- ① DO NOT use this product to follow any moving vehicles.
- ② During the flight, turn off the motors only in case of an emergency.
- ③ Fly the drone back to you as soon as you are notified that the battery is running low.
- ④ This product should not be used while drinking alcohol or consuming drugs, if you are feeling fatigued, taking medicine, or feeling any physical discomfort.
- ⑤ Be aware of the volume of noise that the drone produces. Please ensure to keep your distance to avoid ear damage.



- ⑥ **Stay away from the rotating propellers and motors.**



- ⑦ **DO NOT fly in any spaces where drones are prohibited. Please respect people's right to privacy by not flying your drone close to others.**

2.4 Use of Battery

- ① Please ensure batteries are fitted in the correct orientation as shown in the instruction manual.
- ② Avoid short circuits by fitting the batteries correctly, and do not crush or squeeze the batteries as this could cause the risk of a fire or explosion.
- ③ DO NOT mix new and old batteries as this can lead to poor performance of the product.
- ④ Please dispose of used batteries carefully, do not litter, and recycle where ever possible.
- ⑤ DO NOT expose dead batteries to heat or fire or they may explode.
- ⑥ If the device is not going to be used for an extended period of time, please remove batteries to prevent potential damage from to the drone battery leakage.

- ⑦ Only use the USB charging cable that comes with the drone to charge the battery.
- ⑧ DO NOT connect the battery directly to wall outlets or car cigarette-lighter sockets as this will damage your battery as they are a different voltage.
- ⑨ DO NOT attempt to disassemble or modify the battery in any way
- ⑩ DO NOT use the battery if it gives off an odor, generates heat, becomes discolored, deformed or appears abnormal in any way. If any of these situations occur while the battery is in use or being charged, remove it from the device or charger immediately and discontinue use.
- ⑪ DO NOT pierce the battery casing with a nail or any other sharp object, break it open with a hammer, or step on it! Dispose or recycle this battery as it may cause personal injury or damage to your drone.
- ⑫ Always charge the batteries on a fireproof surface and away from combustible materials. DO NOT charge on surfaces that can catch fire. This includes wood, cloth, carpet, or on the application's device.
- ⑬ DO NOT immerse the battery in water or get it wet.
- ⑭ DO NOT solder battery terminal in any way.
- ⑮ Keep batteries out of reach of children or pets.
- ⑯ DO NOT short-circuit the battery by connecting wires or any other metal object to the positive(+) and negative(-) terminals.



Li-Po Battery Disposal & Recycling


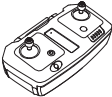

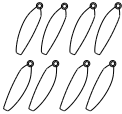



Waste Lithium-polymer batteries must not be placed with household trash. Please contact the local environmental or waste agency or the waste agency or the supplier of your model or your nearest Li-Po battery recycling center.





3.0 MAINTENANCE

- ① Clean the product after each use with a clean, soft cloth.
- ② Avoid prolonged exposure to direct sunlight and avoid buildup of heat on the drone or batteries.
- ③ This device is not waterproof and must not be submerged or subjected in water under any circumstance. Failure to keep the device completely dry will result in the failure and permanent damage to the unit. Be aware that although it might be dry where you are, droplets of rain or mist from a river or waterfall could be damaging your drone where it is flying.
- ④ Frequently check the charging plug and other accessories for signs of damage. If any part of the device or cables are damaged, avoid use or charging until the device can be serviced.

4.0 PACKAGE CONTENTS



 <p style="text-align: right;">×1</p>	 <p style="text-align: right;">×1</p>	 <p style="text-align: right;">×1</p>
<p style="text-align: center;">Drone</p>	<p style="text-align: center;">Transmitter</p>	<p style="text-align: center;">Drone Battery</p>
 <p style="text-align: right;">×1</p>	 <p style="text-align: right;">×1</p>	 <p style="text-align: right;">×1</p>
<p style="text-align: center;">Spare Propeller</p>	<p style="text-align: center;">USB Charging Cable</p>	<p style="text-align: center;">Screwdriver</p>
 <p style="text-align: right;">×1</p>		
<p style="text-align: center;">Instructions For Use</p>		

5.0 DRONE DETAILS

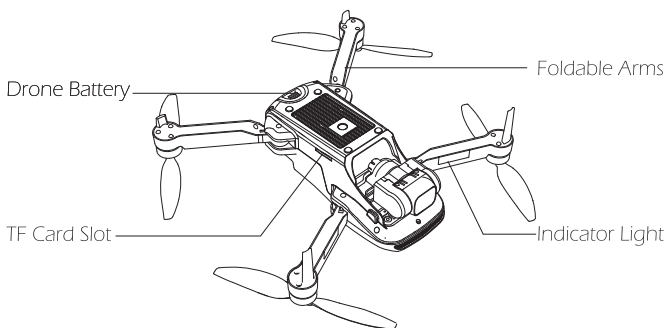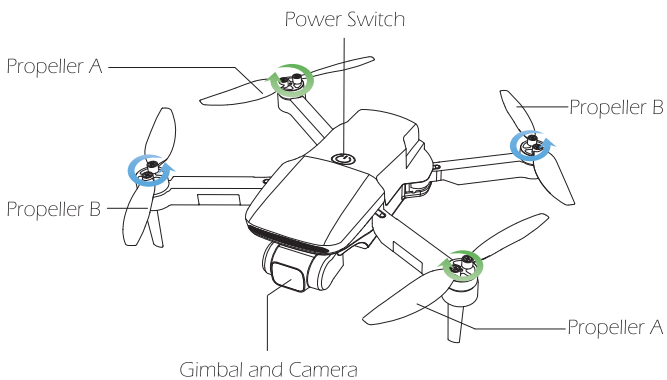


6.0 TRANSMITTER DETAILS

6.1 Transmitter Functions

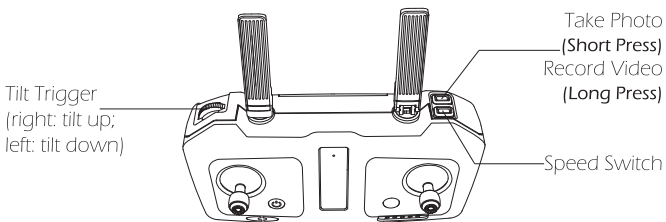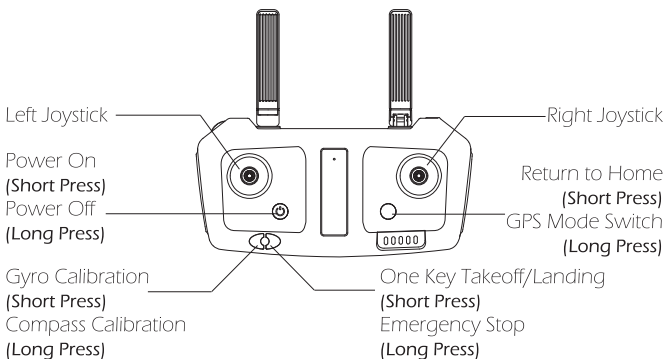


6.2 LCD Screen

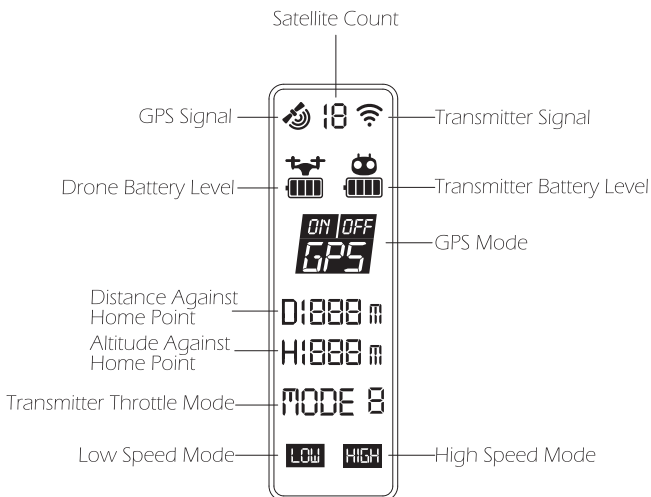


7.0 JOYSTICK MODE

7.1 MODE 2 (Left hand throttle MODE 2 will be the default setting.)

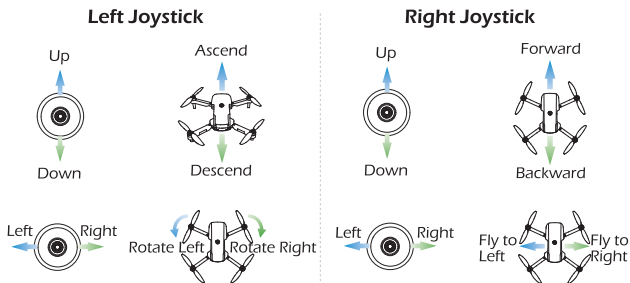

7.2 MODE 1


To enter MODE 1, turn on the transmitter while holding the “Speed Switch” button. (Please do not release the “Speed Switch” button until the transmitter is powered on.)

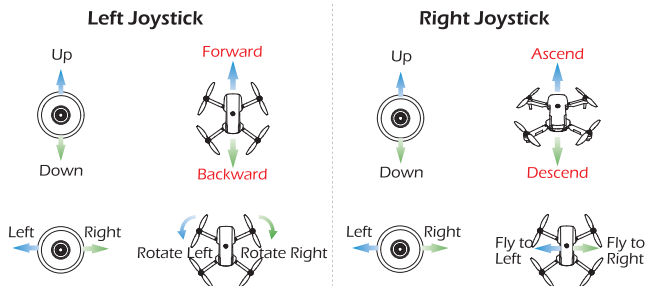

Tip: Please switch the joystick mode before the transmitter is successfully connected to the drone, otherwise it cannot be switched.

8.0 INSTALLATION


8.1 Drone Battery

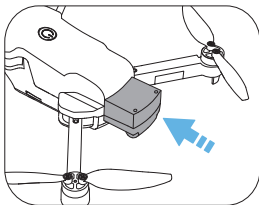

Installation: Push the battery correctly into the drone battery compartment. Make sure that you hear a click sound indicating the battery is firmly installed.



Attention:

- Before installing the battery, please remove the insulation gasket from the battery.
- The battery should be installed firmly, failure to do so may affect the flight safety of your drone.

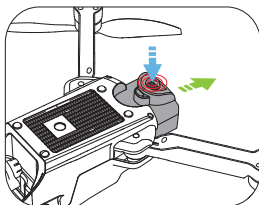


Removal: Press the lock button on the battery and pull it back to remove the battery from the fuselage.

8.2 Propellers

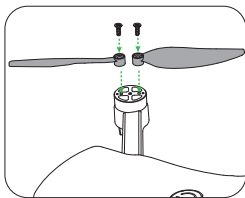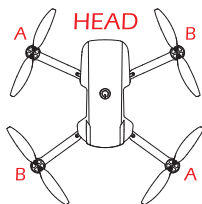


Installation: As shown above, connect each propeller to its corresponding motor shaft, either position "A/B", then lock the propeller to the motor shaft.

Attention: Pay attention to the "A" or "B" is printed on each propeller. The drone will not fly unless the correct propeller is installed on the correct motor shaft.

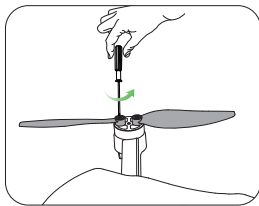


Removal: For propeller removal, use a screwdriver (provided) to rotate counter-clockwise and remove propellers. Be sure to hold the motor while detaching the propellers.

8.3 TF Card

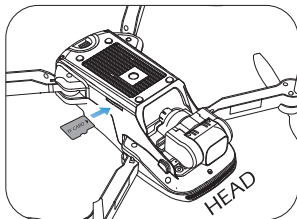


To store your photos and videos, insert the TF card (not included) into the slot as shown above before turning on the drone. The drone supports TF card up to 128 GB.

8.4 Arms

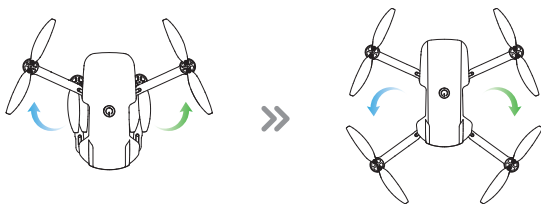


All arms of the drone are folded before the drone is packaged at the factory. First, unfold the front arms, then unfold the rear arms.

8.5 Phone Holder

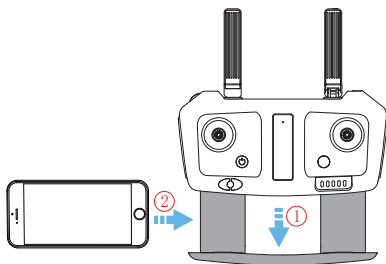


- ① Pull out the mobile phone holder from the bottom of the transmitter.
- ② Adjust the phone holder upward or downward according to the size of your mobile phone.

8.6 Antenna

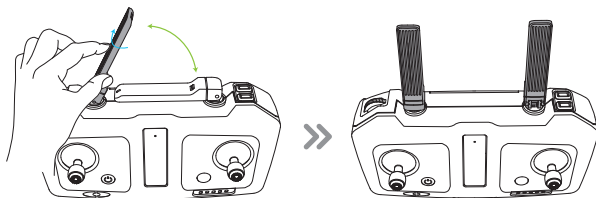

Before starting the flight, you can expand the two antennas on the transmitter separately.

8.7 Transmitter Battery

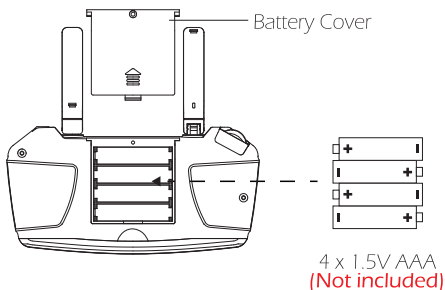


As shown above, open the battery cover on the back of the transmitter, insert the four AAA batteries (**Not included**) into the battery compartment, and close the battery cover to complete the installation.

⚠ When installing the batteries, please pay attention to the positive and negative polarity of the battery to ensure the correct installation of the batteries.

9.0 CHARGING

9.1 Drone Battery

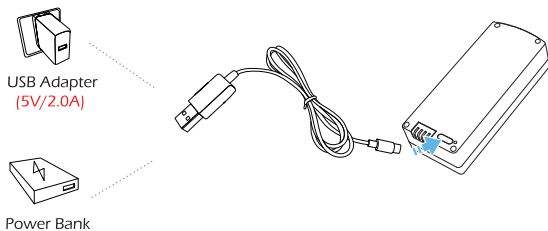

- ① Connect the Battery to the USB Charging Cable.
- ② Connect the USB Charging Cable with Power Bank or a USB Adapter (5V/2.0A) for charging.
- ③ When the battery is charging, the green indicator light on the battery will flash.
- ④ When the battery is fully charged, the green indicator light on the battery will turn solid.
- ⑤ The charging time is about 6 hours.



Before charging, please read the instruction of the “Use of Battery” section of the “Safety Guidelines” carefully!

10.0 OPERATION GUIDE

10.1 Download APP



iOS



Android APP on Google play

Scan the QR code, corresponding to either App Store™ or Google Play™ Store and download the **HS FLY** app for free.

Required Operating Systems: iOS 9.0 or later/Android 5.1 or later.

10.2 Connect to Wi-Fi

Connect your smartphone to the Wi-Fi network created by the drone. To check the drone's status in the **HS FLY** app.


- ① Open your phone's Wi-Fi settings and click Wi-Fi to search for the Wi-Fi of the drone.
- ② Select the Wi-Fi network: **HolyStoneFPV_*******.
- ③ Wait for couple of seconds for your phone to connects to the drone's Wi-Fi.
- ④ Open the **HS FLY** application.

> The connection between your smartphone and the drone will be established automatically.


All of the operations shown in this manual are demonstrated using **MODE 2**.

10.3 Pairing


① Long press the Power Button to turn on the drone.

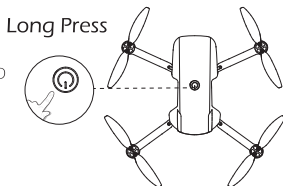


② Place the drone on a flat and level surface with the head forward and the tail facing towards the pilot.

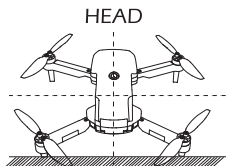


③ Short press the Power Button to turn on the transmitter. Once the transmitter sends out two beeps, it means that the drone has been successfully paired with the transmitter.

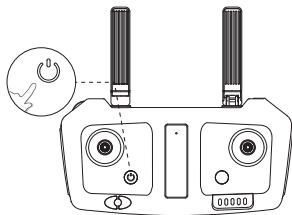


10.4 Calibrating the Compass

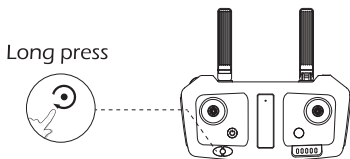

Step 1: As shown above, long press the Compass Calibration button to enter the compass calibration, the drone indicator lights flash quickly, it indicates that the drone can enter the Step 2.

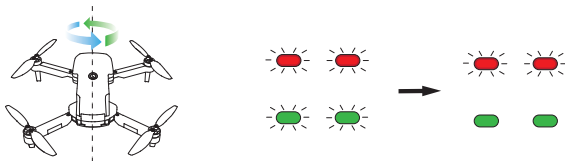


Step 2: Hold the drone horizontally and rotate the drone in 3 complete circles. When completed the rear indicator lights will turn solid green, and the transmitter sends out “Di” sound, which indicates that the drone can enter the Step 3.

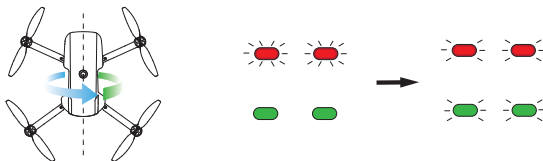

Step 3: Hold the drone vertically and rotate the drone in 3 complete circles until all the indicator lights are flashing, and the transmitter will send out “DiDi” sound.

10.5 GPS Searching (DO NOT use GPS Mode indoors)

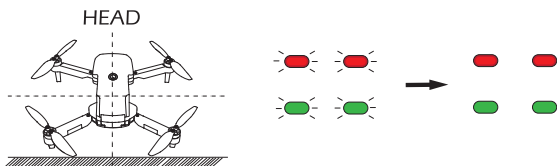


- Place the drone on a flat and dry surface where is unobstructed and lit.
- Indicator lights will turn to blink green (rear) and red (front). This means the drone is searching the GPS Signal. This process will take a few minutes. Once all the lights have turned solid, GPS Mode is Ready (Only when the drone is connected to GPS successfully can it take off).
- Green (rear) and red (front) lights are all solid.

ATTENTION:

- ① If the indicator lights on the drone keep blinking, it indicates the drone is searching for GPS signals.
- ② If the lights keep blinking after a few minutes, it indicates that the process has FAILED. Please taking the drone a meter or so from the ground, and repeat all the Compass Calibration operations until the process is successful.
- ③ When flying indoors, please hold the button (Ⓜ) for about 3 seconds to exit GPS Mode, and the indicator lights will blink. You can fly this drone when you complete the Compass Calibration operations if you exit GPS mode.


10.6 Calibrating the Gyro

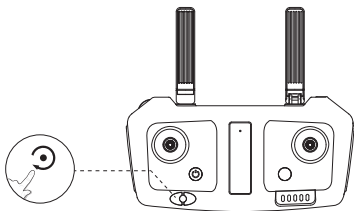

As shown above, short press the Gyro Calibration button to calibrate the gyro. The indicator lights on the drone change from quick flash to solid, the gyroscope calibration is completed.

⚠ To ensure a stable flight, we recommend that pilots perform the Gyro calibration before each flight.


10.7 Starting/Stopping the Motors

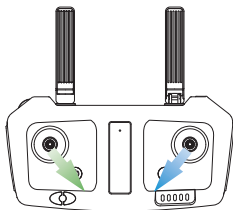



- **Starting the Motors:** As shown above, push both joysticks to the bottom inner corners to start the motors. Once the motors have started spinning, release both joysticks simultaneously.

- **Stopping the Motors:** Repeat this operation, the motors will stop immediately. Release both joysticks once motors stop.

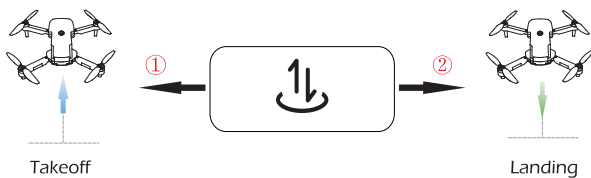
10.8 Takeoff/Landing





- ① After starting the motor, press the “” button, the drone rises slowly.
- ② When the drone is flying, press the “” button again and the drone land slowly until landing.

11.0 FUNCTION DETAILS

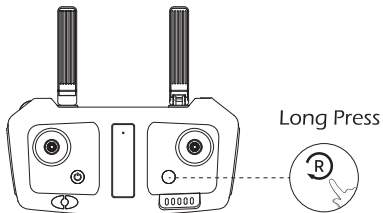
11.1 GPS Mode Switch





When turning on the transmitter, the default mode is the GPS mode. Turn off GPS by pressing and holding the GPS Mode Switch button for 3 seconds. Check the icon “” or “” on the LCD screen to confirm GPS status.


Tip: If the GPS signal is weak or flying indoors, the GPS mode must be turned off before the drone can take off.

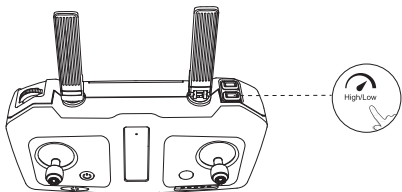11.2 Speed Switch



Short press the Speed Switch button once to switch speed. A “Di” tone indicates Low Speed, the LCD screen showing “”. A “DiDi” tone indicates High Speed, the LCD screen showing “”. (The Low Speed is the default speed mode.)


11.3 Emergency Stop

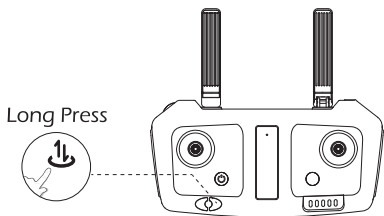

Long press the Emergency Stop button, the motors will stop immediately. Be aware that you risk breakage of the drone if it falls a large distance or hits anything at a high rate of speed.

Attention: The Emergency Stop function should only be used in case of emergency during the flight to avoid any damage or injury.


11.4 Take Photo/Record Video

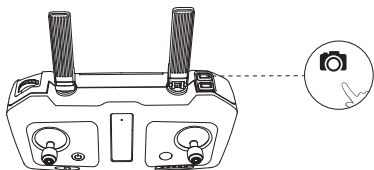


Take Photo: Short press the Take Photo button on the transmitter to take pictures. One beep can be heard from the transmitter, indicating the camera has successfully taken one photo.

Record Video: Long press the same button, two beeps from the transmitter will be heard. This tells you that the camera has started recording video. You can exit the recording by long pressing the same button again.

11.5 Gimbal Dial

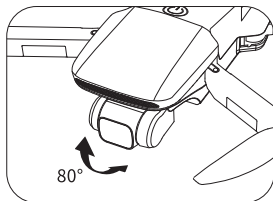

The gimbal provides a steady platform for the attached camera, allowing you to capture clear, stable images and video. The gimbal can tilt the camera within an 80° range.

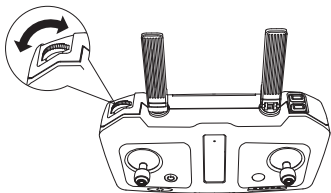

Use the gimbal dial on the transmitter to control the tilt movement of the camera. Press to the left to tilt the camera downwards, and press to the right to tilt the camera upwards.

11.6 Return to Home (RTH)

The Return to Home(RTH) brings the drone back to the last recorded Home Point. This function can only be achieved in GPS mode. There are three types of RTH:

Smart RTH/Failsafe RTH/Low Voltage RTH.


11.6.1 Smart RTH

If the GPS signal is available, press the Return to Home button once to start the Smart RTH, and the transmitter will send out a beep. Your drone will return to the Home Point. Make sure there are no buildings or other obstacles in the flight path. Press the RTH button again to exit RTH procedure and regain control of the drone.


11.6.2 Failsafe RTH

If the GPS signal is available, and the Home point is recorded previously. Failsafe Return will be triggered if the transmitter signal is lost for more than 6 seconds. The drone will automatically start the return procedure and it will fly back to the last recorded Home Point. When the transmitter signal is recovered, you can regain control of the drone.


11.6.3 Low Voltage RTH

① When the drone's rear green indicator light flash quickly, the “” symbol is displayed on the screen of the transmitter, the transmitter will send out beeps continuously. The First Low Voltage RTH will be triggered. And the drone will return automatically in the following two conditions: (At this time, the drone can only fly within a safe range of the height no more than 66 feet and the distance no more than 66 feet.)

a. When the flight altitude is higher than 66 feet, the drone will fly back above the Home Point then descend automatically to 66 feet high and exit the First Low Voltage RTH.

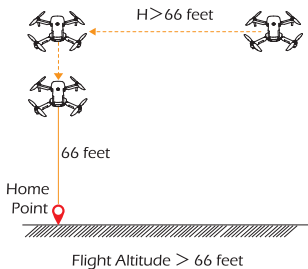


b. When the flight altitude is lower than 66 feet, the drone will elevate automatically to 66 feet high, then fly back above the Home Point and exit the First Low Voltage RTH.

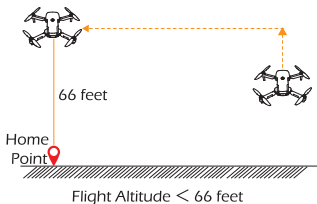


② If the drone's all indicator lights begin to flash quickly, the "🚁" symbol will be displayed on the transmitter screen and the transmitter will send out beeps continuously. The Second Low Voltage RTH is automatically triggered.

a. When the flight altitude is equal to 66 feet, the drone will stay in the current altitude and return above the Home Point then descend vertically.

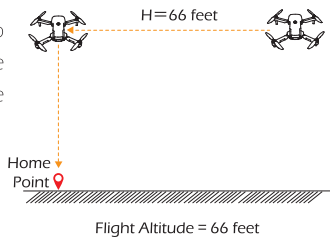




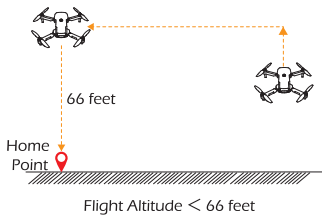


b. When the flight altitude is lower than 66 feet, the drone will elevate automatically to 66 feet high, then fly back above the Home Point and descend vertically.



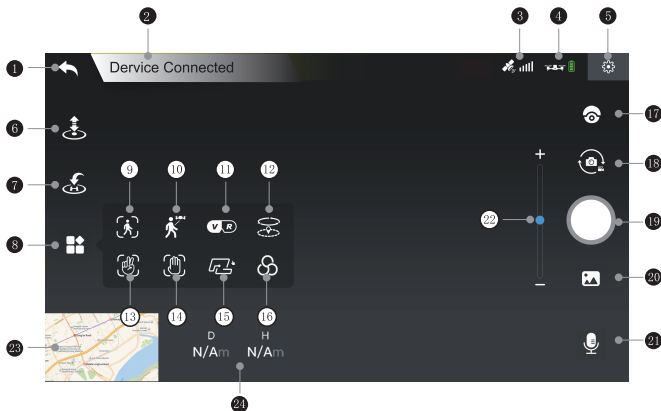



















12.0 APP OPERATION INSTRUCTION

12.1 Operation Interface



1. Homepage (): Tap this icon to return to the main menu.
2. System Status (): This icon indicates drone flight status.
3. GPS Signal Strength (): Shows the current GPS signal strength. White bars indicate adequate GPS strength.
4. Drone Battery Level (): Real-time display of the current remaining battery level of the drone.
5. Setting (): Tap the icon to enter the setting interface, settings for flight height/distance and return altitude, etc. The drone is in Beginner Mode by default, and the operator can exit Beginner Mode by changing this setting.

6. One Key Takeoff/Landing (): Tap this icon once, and the drone will take off automatically to 5 feet. Tap again and the drone will slowly land on the ground.
7. Return to Home (): The drone will return to the recorded Take-off Point.
8. Multifunction (): Opens a menu that allows the pilot to select different flight modes or gesture activities.
9. Locked Follow Mode (): After locking the following target, the camera is always oriented towards the following target, but the position of the drone remains unchanged. (The following target should not move too fast to avoid following loss.)
10. Follow Me Mode (): The drone stays at a distance from the operator and following the GPS position of the phone.
11. 3D VR (): Match with VR glasses (Not included) to watch 3D images in real time.
12. Point of Interest (): The drone will orbit around the subject automatically to allow the operator to focus on framing the subject of their shoot.
13. Hand Gesture-Victory (): Perform the Victory gesture within 3m of the drone while facing toward the camera and it will take a selfie.
14. Hand Gesture-High Five (): Perform the High Five gesture within 3m of the drone while facing toward the camera to start recording the video. Perform the same gesture again to stop.


15. Waypoint Mode (): The drone will fly along the flight path drawn on screen.
16. Camera Filter (): Tap this button to add photo effects.
17. Gimbal Dial (): Tap this button to open the Pitch Scroll Bar which you can scroll left and right to control the camera pitch movement.
18. Photo/Video Button (): Tap to switch between photo and video recording modes.
19. Take Photo/Record Video ( / ): Tap to start shooting photos or recording video.
20. Gallery (): Tap to preview photos and videos as soon as they are captured.
21. Sound Recording (): The device can record the operator's voice while the camera is recording.
22. Zoom Trigger (): You can scroll up and down to control the zoom in and zoom out.
23. Map: Tap the Mini Map to switch between Camera View and Map View.
24. Flight Parameters:
Distance ( N/A): Horizontal distance from the Take-off Point.
Height ( N/A): Vertical distance from the Take-off Point.

12.2 Beginner Mode


The Default GPS Mode is Beginner Mode, under Beginner Mode:

1. Flight Distance is limited between 0~30m/0~98feet.
2. Flight Altitude is limited between 0~30m/0~98feet.
3. The default RTH Altitude is 20m/66feet.

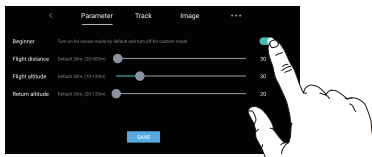


You can Turn-off the Beginner Mode to modify the parameters in the APP on your phone.

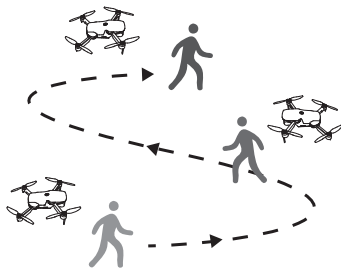

12.3 Follow Me



When the Follow Me function is enabled, the drone will follow the GPS in your phone to follow you wherever you go.


1. Ensure the drone's flight range is within 30~160 feet/10~50m.
2. Click the “” icon first, then select the “” icon to enter the Follow Me function — the drone will now follow the phone's coordinates.
3. To exit Follow Me Mode, simply click the “” icon on the app interface again.




Common Issues:

- ① The Follow Me function can only be used if the flight range is within 30~160 feet.
- ② Follow Me mode may be difficult to activate if the phone's GPS signal is too weak. This could be due to the signal loss from surrounding buildings, trees, or congestion from too many mobile phones in the area.
- ③ Use in an open area and be mindful of your surroundings. The drone is NOT equipped with obstacle avoidance.

12.4 Waypoint Mode

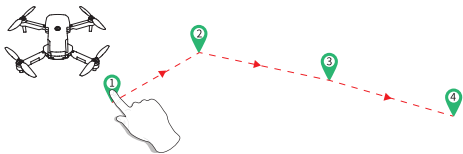It is recommended to enlarge the map if you want to use Waypoint Mode.






1. Click the “” icon on the app interface, then click the “” icon, read and understand the prompts.
2. Set any point (12 points at most) on the screen to create a path. Click “” icon to submit the route. The drone will now fly along the path according to the points connected on the map.
3. You can push the direction joystick to exit the Waypoint Mode. The drone will stop and hover after exiting from Waypoint Mode.





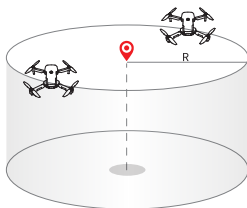

- DO NOT fly the drone towards people, animals, or small/fine objects (e.g. tree branches and power lines) or transparent objects (e.g. glass or water).
- There may be some deviation between the expected and actual flight path.

12.5 Point of Interest



1. Click the “” icon first, then select the “” icon, and follow the prompt box to enter the Point of Interest function.
2. The drone will record its flight position the moment you enter this function as the point of interest. The drone will now continuously orbit around the preset point.
3. You can push the direction joystick to exit the Point of Interest.

12.6 Take Photo/Record Video

1. Click the “  ” icon to switch between photo and video recording modes.
2. Click the “  ” icon to take photo, click once to take a photo.
3. Click the “  ” icon to record video, click once to start recording, and click again to stop recording.
4. Click the “  ” icon to enter the gallery for viewing.
5. Without the TF card installed, the photos and videos will be saved in both app albums.
6. After installing the TF card, the photos and videos will be saved in both the app album and the TF card.

13.0 SPECIFICATIONS

DRONE

Model: HS360

Weight: 276g/9.74 oz

Max Flight Time: 23 minutes (per battery)

Operating Temperature Range: 32° to 104°F

Size: 143 x 88 x 55 mm (Folded)

280 x 210 x 55 mm (Unfolded)

DRONE BATTERY

Capacity: 2000 mAh

Voltage: 7.6 V

Battery Type: Li-Po

Energy: 15.2 Wh

Charging Temperature Range: 41° to 104°F (5° to 40°C)

Charging Time: about 6 hours

GIMBAL

Stabilization: 2-axis (tilt, roll)

Mechanical Range: Tilt: about -45° to +90°

Roll: about -45° to +45°

Controllable Range: Adjusted angle of camera (up and down):

about -80° to +0°

CAMERA

Operating Frequency: 5GHz

Photo Resolution: 2560×1440P (stored in TF card)

3840×2160P (stored on mobile phone)

Video Resolution: 2560×1440P (stored in TF card)

1920×1080P (stored on mobile phone)

Transmission Distance: 984~1640feet/300~500m (outdoor
and unobstructed)

Lens: FOV 118°

Equivalent Focal Length: 2.2mm

Focus Range: Fixed-focus

Anti-shake Function: Available

Live View Quality: 30fps

Photo Formats: JPEG

Video Formats: AVI/MP4

Supported TF Cards: Supports a TF Card with capacity of up to
128 GB (Not included)

Operating Temperature Range: 32° to 104°F

TRANSMITTER

Operating Frequency: 2.4 GHz

Transmitter Power (EIRP): <16 dBm

Flight Distance: 2624~2952 feet/800~900 m

(outdoor and unobstructed)

Battery Type: 4 x 1.5V AAA batteries (Not included)

Operating Temperature Range: 32° to 104°F

USB CHARGING CABLE

Voltage: 5 V --- 2A

Rated Power: ≤10 W

14.0 TROUBLE SHOOTING

No.	Problem	Solution
1	The drone cannot hover after takeoff and tilts to one side.	Place the drone on a flat, level surface and repeat the gyro calibration.
2	The drone vibrated in flight.	The propeller are damaged. Please replace the new propeller.
3	The drone could not be unlocked and the rear light flashed.	The drone battery voltage is too low. Please fully charge the battery.

15.0 CONTACT US

Please do not hesitate to contact us if you need further support.

✉ usa@holystone.com (America)
ca@holystone.com (Canada)
eu@holystone.com (Europe)

☎ +1(855) 888-6699



For online support, please scan
this code with Live Chat

16.0 GENERAL INFORMATION

FCC Statement:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body. This part belongs to the drone.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This part belongs to the transmitter.

IC Notice:

This device complies with Canada Industry licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference; and
- (2) this device must accept any interference. Including interference that may cause undesired operation of the device.

CAN ICES-3 (B)

Avis d'Industrie Canada

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage; et

2) l'utilisateur de l'appareil doit accepter brouillage radioélectrique subi même si le brouillage est susceptible d'en compromettre le fonctionnement. mauvais fonctionnement de l'appareil. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CAN NMB-3 (B)

RF Exposure

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

HOW TO RECYCLE THIS PRODUCT

This symbol on the product or its documentation indicates that it must not be disposed of with household waste.

Uncontrolled waste disposal may harm the environment or human health. Please separate your device from other types of waste to recycle it responsibly.

This will help to foster the sustainable re-use of material resources.

We invite you to contact your retailer or inquire at your local town hall to find out where and how the drone can be recycled.

BATTERY WARNING:

1. Failure to follow all the instructions may result in serious injury, irreparable damage to the battery may cause a fire, smoke or explosion as well.



2. Always check the battery's condition before charging or using it.

3. Replace the battery if it has been dropped, or any odor, overheating, discoloration, deformation or leakage happens.

4. Never use anything other than the approval LiPo charger the battery. Always use a balancing charger for LiPo cells or a LiPo cell balancer. It is recommended that you use the one provided with the product.

5. The battery temperature must never exceed 60°C (140°F) otherwise the battery could be damaged or ignite.

6. Never charge the battery on a flammable surface, near flammable products or inside a vehicle (preferably place the battery on a non-flammable and nonconductive surface).

7. Never leave the battery unattended during the charging process. Never disassemble or modify the housing's wiring, or puncture the cells. Always ensure that the charger output voltage corresponds to the voltage of the battery. Do not short circuit the batteries.

8. Never expose the LiPo battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C (car in the sun, for example).

9. Always keep it out of reach of children.

10. Improper battery use may result in a fire, explosion or other hazards.

11. Non-rechargeable batteries are not allowed to be recharged. Rechargeable batteries should be charged under adults' supervision.
12. DO NOT mix different types of batteries including the new and used ones.
13. Batteries MUST be inserted with the correct polarity.
14. The supply terminals MUST not to be short-circuited. Regular examination of transformer or battery charger for any damage to their cords, plugs, enclosures and other parts MUST be done. If there is damage, they must not be used until the damage has been repaired.
15. The packaging has to be kept since it contains important information.
16. This toy should only to be connected to Class II equipment bearing the symbol.



EU RF Power(EIRP): <16 dBm (2413MHz ~ 2461 MHz)

Caution

- 1.The max operating of the EUT is 45°C. and shouldn't be lower than -10°C.
- 2.The device complies with RF specifications when the device used at 0mm from your body.
- 3.Declaration of Conformity.

We, Xiamen Huoshiquan Import & Export CO.,LTD hereby, declare that the essential requirements compliance with the Directive 2014/53/EU, the RoHS Directive 2011/65/EU and Safety Directive 2009/48/EC have been fully fulfilled on our product with indication below:

Product Name: REMOTE CONTROL MODEL/RADIO CONTROLLED
Model/Mark : HS360/HOLYSTONE

The Statement of compliance is available at the following address:
http://www.holystone.com/Download/CE/HS360_EU_DOC.pdf
This product can be used across EU member states.

MANUFACTURER INFORMATION

Manufactured by

Xiamen Huoshiquan Import & Export CO.,LTD

Room 703,No. 813-2 Xiahe Road, Siming District, XIAMEN, China

+1(855) 888-6699



FAA REGISTRATION: PLEASE FOLLOW ALL FEDERAL, STATE AND LOCAL FAA LAWS. YOU MAY BE REQUIRED TO REGISTER YOURSELF AND YOUR DRONE WITH THE FAA MORE INFO CAN BE FOUND AT: [HTTPS://WWW.FAA.GOV/UAS/GETTING STARTED/](https://www.faa.gov/uas/getting-started/)

After receiving the certificate of registration, you must mark your **unique FAA registration number** on the Drone by any means, such as permanent marker, lable, engraving. This number must be readily accessible and maintained in a condition that is readable and legible upon close visual inspection

WARNING: Do NOT fly drone near airports or any other un-authorized areas. Follow all rules for Federal Aviation Administration (FAA) regulation summary for Small Unmanned Aircraft Systems (sUAS).

Read: Academy of Model Aeronautics (AMA) Know Before You Fly important information brochure.



Made in China

