





14+
age

Instructions For Use

V2.0

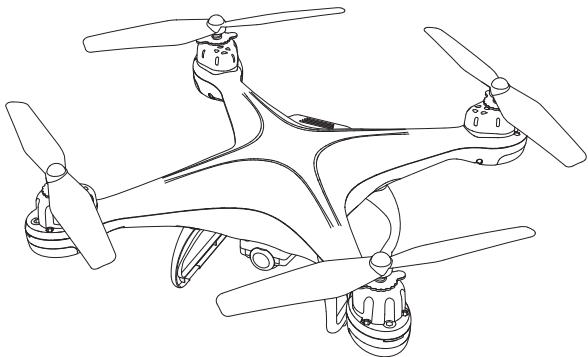

HS110G

 +1(855) 888-6699

 www.holystone.com

 usa@holystone.com (USA)
ca@holystone.com (CA)

eu@holystone.com (EU)

Contents

1.0 Disclaimer & Warning	01
2.0 Safety Guidelines	01
3.0 Maintenance	05
4.0 Package Contents	06
5.0 Drone Details	07
6.0 Transmitter Details	08
7.0 Joystick Mode	09
8.0 Preparation Before Flight	
8.1 Propellers	10
8.2 Landing Gear	11
8.3 TF Card	11
8.4 Drone Battery	12
8.5 Camera	13
8.6 Phone Holder	13
9.0 Charging	
9.1 Drone Battery	14
9.2 Transmitter Battery	15
10.0 Using the App	
10.1 Download APP	16
10.2 Connect to Wi-Fi	16
11.0 Operation Guide	
11.1 Pairing	17
11.2 Calibrating the Compass	18
11.3 GPS Searching	20
11.4 Calibrating the Gyro	21
11.5 Unlock the Motors	21
11.6 One Key Takeoff/Landing	22

12.0 Functions Details	
12.1 APP Functions	23
12.2 Beginner's Mode	25
12.3 Speed Switch	26
12.4 Emergency Stop	26
12.5 Trimmer Function	27
12.6 Headless Mode	28
12.7 Return to Home	30
13.0 Specifications	31
14.0 Contact Us	33
15.0 General Information	34

1.0 DISCLAIMER & WARNING

1. Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product. This product is not recommended for people under the age of 14. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct, and any damage caused while using this product, and any consequence. You agree to only use this product for its designed purposes and in accordance with the local laws, regulations and all applicable policies and guidelines that HolyStone may provide.

2. When using this product, please be sure to strictly abide by the specification requirements and safety guidelines stated in this document. Any personal injury, property damage, legal disputes and all other adverse events caused by the violation of any of the safety instructions or due to any other factor, WILL NOT be HolyStone's responsibility.

2.0 SAFETY GUIDELINES

2.1 Check Before Use

- ① This product is a high precision drone that integrates various electronic stability and control mechanisms. Please be sure to configure this drone carefully and correctly to ensure safe, accident-free operation.
- ② Ensure that the batteries of the drone and transmitter are clean, undamaged, and fully charged before every use.
- ③ Ensure that all the propellers are undamaged and are installed in the correct orientation.

④ Please perform a thorough check of the product before each use. Inspect the integrity of the parts, any signs of cracks and wear off on the propellers, battery power and effectiveness of the indicator, etc. If there is any problem found after checking the drone, please refrain from using it until the problem is resolved.

2.2 Flight Environment



+



+



Fly in Open Areas

**Maintain Line
of Sight**

**Fly Below
394 feet (120m)**



Avoid flying over or near obstacles, crowds, high voltage power lines, trees, airports or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



DO NOT use this drone in adverse weather conditions such as rain, snow, fog, and wind.

2.3 Operation Requirements

- ① DO NOT use this product to follow any moving vehicles.
- ② During flight, turn off the motors only in case of an emergency.
- ③ When the battery runs low, return the drone back to your starting point.
- ④ Do NOT use this product if you feel tired, unwell, or after taking medicine or drinking alcohol.
- ⑤ Be aware of the volume of noise that the drone produces. Please ensure to keep your distance to avoid ear damage.



⑥ **Stay away from the rotating propellers and motors.**

⑦ **DO NOT fly in any spaces where drones are prohibited. Please respect people's right to privacy by not flying your drone close to others.**

2.4 Use of Battery

- ① Please ensure batteries are fitted in the correct orientation as shown in the instruction manual.
- ② Avoid short circuits by fitting the batteries correctly, and do not crush or squeeze the batteries as this could cause the risk of a fire or explosion.
- ③ DO NOT mix new and old batteries as this can lead to poor performance of the product.
- ④ Please dispose used batteries carefully, do not litter, and recycle them as much as possible.
- ⑤ DO NOT expose dead batteries to heat or fire or they may explode.

- ⑧ If the device is not going to be used for an extended period of time, please remove batteries to prevent potential damage to the drone from battery leakage.
- ⑦ Only use the USB charging cable that comes with the drone to charge the battery.
- ⑧ DO NOT connect the battery directly to wall outlets or car cigarette-lighter sockets as this will damage your battery since they have different voltages.
- ⑨ DO NOT attempt to disassemble or modify the battery in any way.
- ⑩ DO NOT use the battery if it gives off an odor, generates heat, becomes discolored, deformed or appears abnormal in any way. If any of these situations occur while the battery is in use or being charged, remove it from the device or charger immediately and discontinue use.
- ⑪ DO NOT pierce the battery casing with a nail or any other sharp object, break it open with a hammer, or step on it! Dispose or recycle this battery as it may cause personal injury or damage to your drone.
- ⑫ Always charge the batteries on a fireproof surface and away from combustible materials. DO NOT charge on surfaces that can catch fire, which includes wood, cloth, carpet.
- ⑬ DO NOT immerse the battery in water or get it wet.
- ⑭ DO NOT solder battery terminal in any way.
- ⑮ Keep batteries out of reach of children or pets.
- ⑯ DO NOT short-circuit the battery by connecting wires or any other metal object to the positive (+) and negative (-) terminals.



Li-Po Battery Disposal & Recycling


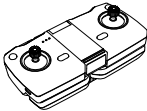

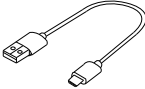
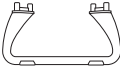
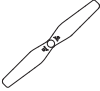

Waste Lithium-polymer batteries must not be placed with household trash. Please contact local environmental or waste agency or the waste agency or the supplier of your model or your nearest Li-Po battery recycling center.





3.0 MAINTENANCE

- ① Clean the drone after each use with a clean, soft cloth.
- ② Avoid prolonged exposure to direct sunlight and avoid buildup of heat on the drone or batteries.
- ③ This device is not waterproof and must not be submerged or subjected to water under any circumstance. Failure to keep the device completely dry will result in the failure and permanent damage to the unit. Be aware that although it might be dry where you are, droplets of rain or mist from a river or waterfall could damage your drone where it flies.
- ④ Frequently check the charging plug and other accessories for signs of damage. If any part of the device or cables are damaged, avoid use or charging until the damaged parts is replaced.


4.0 PACKAGE CONTENTS

		
Drone	Transmitter	Drone Battery
		
USB Charging Cable	Landing Gear	Propeller
		
Instructions For Use		

5.0 DRONE DETAILS

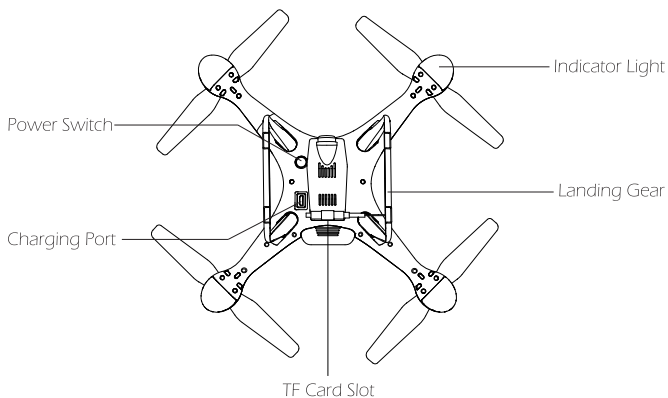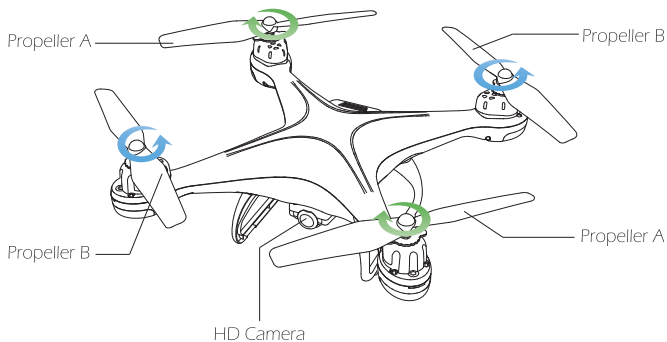

6.0 TRANSMITTER DETAILS

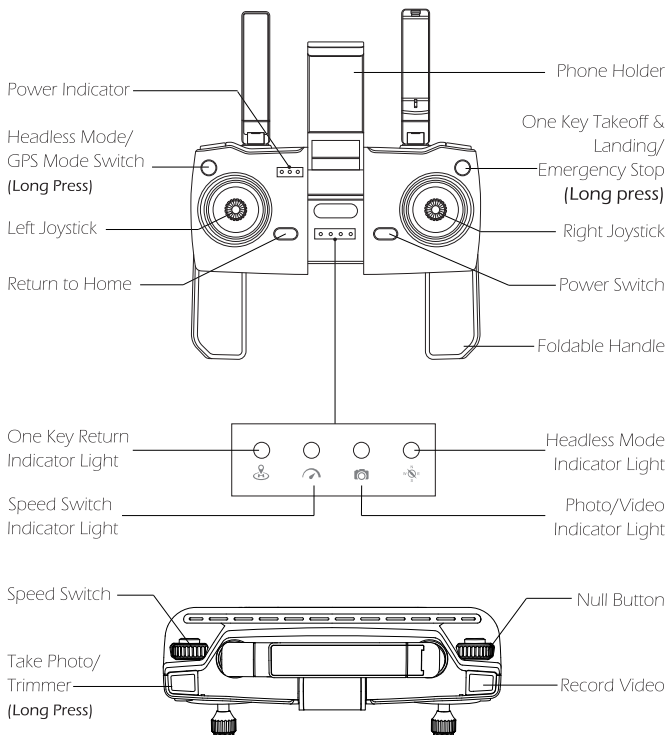


Tip:

Turning Off: Press the Power Button () once, then press again and hold for 2 seconds to turn off.


7.0 JOYSTICK MODE

7.1 MODE 2 (Left hand throttle MODE 2 will be default setting.)

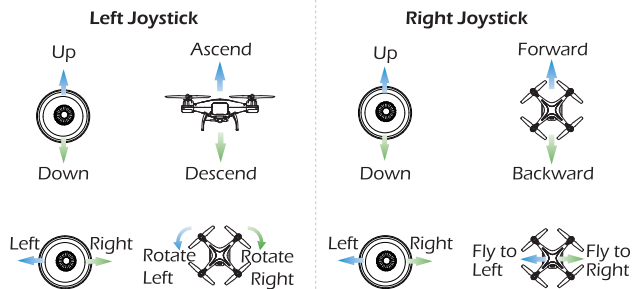

7.2 MODE 1


To enter MODE 1, turn on the transmitter while holding the “Take Photo/Trimmer” button. (Please do not release the “Take Photo/Trimmer” button until the transmitter is powered on.)

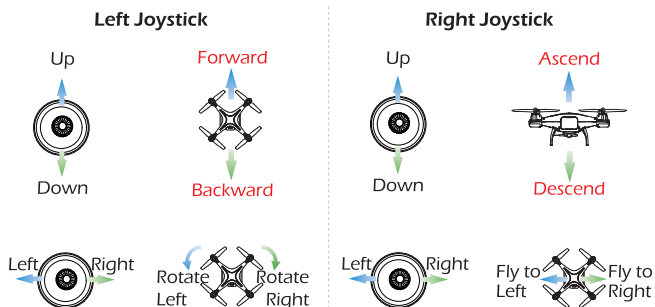


8.0 PREPARATION BEFORE FLIGHT

8.1 Propellers

There are two types of Quick Release propellers, which are designed to spin in different directions. Marks are used to indicate which propellers should be attached to which motors. Make sure to match the propeller and motor following the instructions.

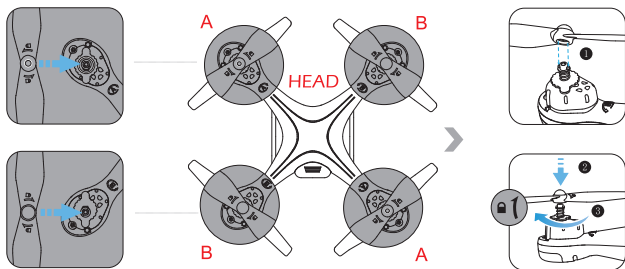


Attaching the propellers:

Attach the propellers with marked to motors with marks and unmarked propellers to motors without marks. Press each propeller down onto the motor and then follow the direction of the lock icon “” on the propeller until it is secure.

Detaching the propellers:


Press the propeller down onto the motors and rotate them in the opposite direction according to the lock icon “” on the propeller.

8.2 Landing Gear

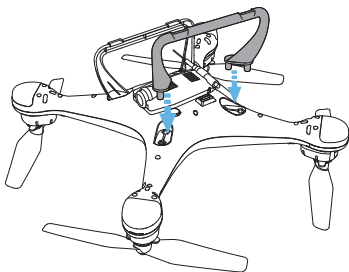


Please install the Landing Gear on the bottom of the drone.

8.3 TF Card

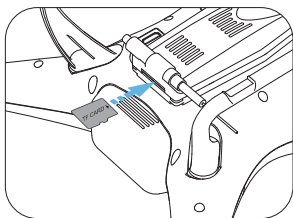

To store your photos and videos, insert the TF card (**not included**) into the slot as shown above before turning on the drone. The drone supports TF cards up to 128 GB.


8.4 Drone Battery

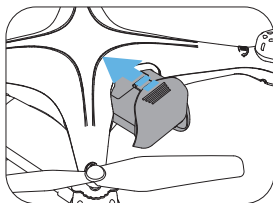

Installation: Push the battery correctly into the drone battery compartment. Make sure that you hear a click sound, which indicates that the battery is firmly installed.


Attention:

The battery should be installed firmly. Otherwise, the flight safety of your drone may be affected. The drone may crash due to a power-cut during the flight.

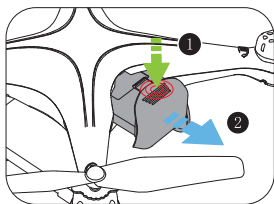

Removal: Press the lock button on the battery, and pull the battery out from the fuselage.

8.5 Camera

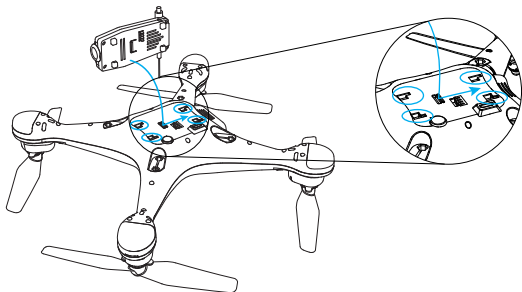


1) According to the above diagrams, please ensure the camera is mounted on the four camera slots at the bottom of the fuselage, then push the camera backward to lock it.


2) Push the camera forward to take it out.

Tip: The camera is installed before the drone is packaged at the factory.

8.6 Phone Holder

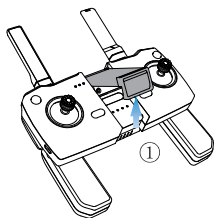

Pic.1

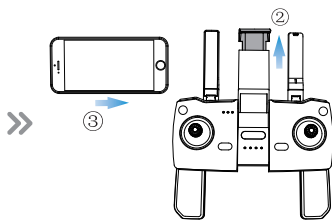




Pic.2

Open the phone holder completely (**Pic.1**). Adjust the phone holder upward and downward according to the size of your phone (**Pic.2**).

9.0 CHARGING

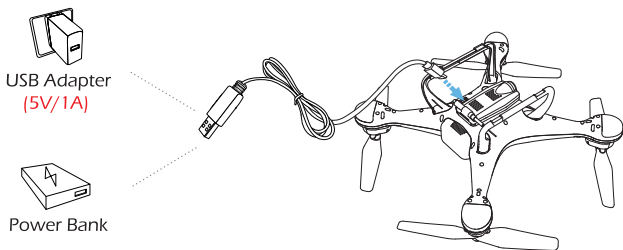9.1 Drone Battery




- 1) When the drone's battery runs low, the indicator lights on the drone will flash continuously.
- 2) Connect the USB charging cable to the drone charging port.
- 3) Plug the USB charging cable into a USB charging port on a power bank or a USB adapter (5V/1A).
- 4) When the battery is charging, the drone's power switch () will be on
When the battery is charged, the drone's power switch () will be off.
- 5) Charging time: About 120 minutes.



- Before charging, please read the instructions in the **"Use of Battery"** section of the **"Safety Guidelines"** carefully!
- DO NOT charge a battery immediately after a flight as the temperature may be too high. Please wait until it cools down to room temperature before charging again.

9.2 Transmitter

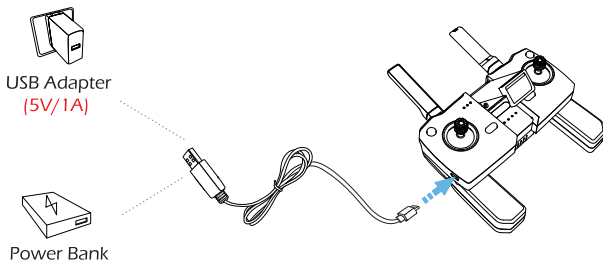

- 1) When the transmitter's battery runs low, the Power Indicator on the transmitter will blink constantly.
- 2) Connect the USB charging cable to the transmitter charging port.
- 3) Plug the USB charging cable into a USB charging port on a power bank or a USB adapter (5V/1A).
- 4) When the battery is charging, the indicator light on the transmitter is red.
When the battery is charged, the indicator light on the transmitter turns green.
- 5) Charging time: About 50 minutes.



Before charging, please read the instructions in the "Use of Battery" section of the "Safety Guidelines" carefully!

10.0 USING THE APP

10.1 Download App



iOS



Android APP on Google play

Scan the QR code, corresponding to either App Store™ or Google Play™ Store, and download the **HS GPS V1** app for free.

Required Operating Systems: **iOS 11.0** or later/**Android 4.4** or later

10.2 Connect to Wi-Fi

Connect your phone to the Wi-Fi network created by the drone. You can check the drone's status on the **HS GPS V1** App.

① Make sure to turn off Bluetooth, Mobile Data, and VPN. Enter your phone's Wi-Fi settings and click Wi-Fi to search for the Wi-Fi of the drone. (Make sure to turn on the drone before going to the Wi-Fi settings on your phone)

② Select the Wi-Fi network: **HolyStoneFPV-*******.

③ Wait a few seconds for your phone to connect to the drone's Wi-Fi.

④ Enter the **HS GPS V1** application.

> The connection between your phone and the drone is established automatically.


Attention: The Wi-Fi network created by the drone does not access the Internet.

11.0 OPERATION GUIDE


All of the operations shown in this manual are demonstrated using **MODE 2**.

11.1 Pairing


① Short press the Power Switch to turn on the drone.

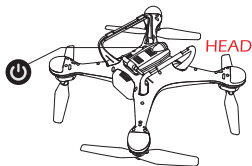


② Place the drone on a flat and level surface with its head forward and tail facing towards the pilot.

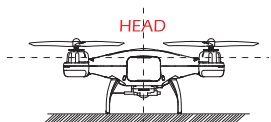



③ Short press the  button to turn on the transmitter.

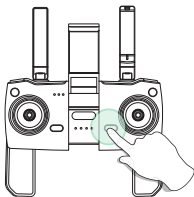

④ Push the left joystick up then down to pair the drone with the transmitter. The indicator lights on the drone are pink in front and purple in rear if the drone is paired successfully.


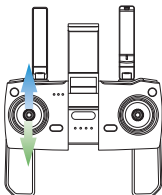


11.2 Calibrating the Compass

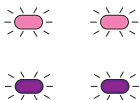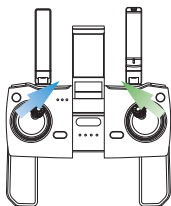


Step 1:

Simultaneously push the left joystick to the top right corner and the right joystick to the top left corner. The front pink lights and the rear purple lights will flash quickly.

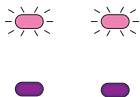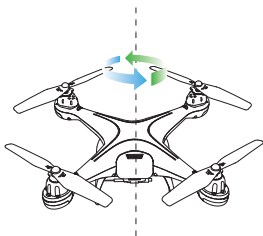

Step 2:

Hold the drone horizontally and rotate it until the rear purple lights turn solid.

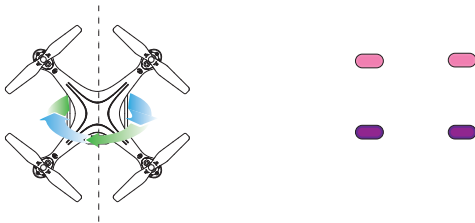

Step 3:

Hold the drone vertically and rotate it until the front Pink lights turn solid.

Attention:

- To ensure a stable flight, we recommend that pilots perform a compass calibration before each flight.
- DO NOT calibrate the compass in locations where magnetic interference may occur, such as close to magnetite deposits or large metallic structures such as parking structures, steel reinforced basements, bridges, cars, or scaffolding.
- DO NOT carry objects (such as mobile phones) that contain ferromagnetic materials near the drone during calibration.


11.3 GPS Searching (DO NOT use GPS Mode indoors)




Place the drone on a flat and dry surface where is unobstructed and lit area. The front white lights and the rear blue lights will flash quickly. This means the drone is searching for the GPS Signal. This process will take about one minute.

When all indicator lights turn solid, GPS Mode is Ready. (Only when the drone is connected to GPS successfully can it take off).

ATTENTION:

- ① If the Indicator lights keep blinking quickly, it indicates the drone is searching for GPS signals.
- ② If the drone keeps blinking quickly after a few minutes, it indicates that the process has FAILED. Please move to an open area, and repeat all the Compass Calibration operations until the process is successful.
- ③ When flying indoors, please hold  button for 3 seconds to exit GPS Mode, and the indicator lights of the drone will blink slowly. You can fly this drone when you complete the Compass Calibration operations if you exit GPS mode.


11.4 Calibrating the Gyro

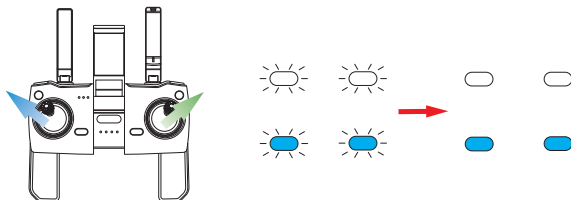

Simultaneously push the left joystick to the top left corner and the right joystick to the top right corner. When the drone's front white light and rear blue lights change from flashing quickly to solid, it means that the gyroscope calibration is completed.

Tip: To ensure a stable flight, we suggest that the pilot calibrates the gyro every time after pairing the drone and after a crash.


11.5 Unlock the Motors

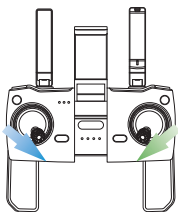


Simultaneously push the left joystick to the lower right corner and the right joystick to the lower left corner. The motors will rotate, and the drone will be unlocked.

11.6 One Key Takeoff/Landing

Please unlock the motors before takeoff.

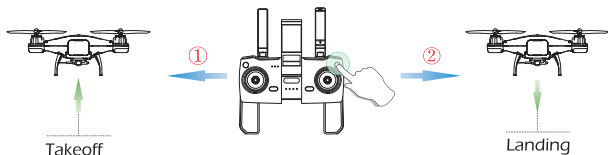

① Press the One Key Takeoff button (), and the drone will automatically take off and hover at about 5 feet.










② When the drone is flying, press the One Key Landing button (), and the drone will automatically land on the ground.













Tip: Before flying, make sure the GPS Mode is turned on in case the drone gets lost!

12.0 FUNCTIONS DETAILS

12.1 APP Functions




	Return: Returns the main interface.
	Controls ON/OFF
	TapFly: Operator can set any points on the map to draw the flight path, and then the drone will fly along this route. <i>(It is recommended to enlarge the map.)</i>
	Media Gallery: Photos or videos can be viewed.
	Flight Record: Tap to view historical data on flight date, distance, speed and altitude.
	3D VR: Match with VR glasses <i>(Not included)</i> to watch 3D images in real time.
	Flip Screen: Application interface can be flipped 180°.
	GPS Signal: Displays current GPS signal strength.
	Setting: Tap the icon to enter the setting interface, settings for flight height/distance and return altitude.

	Follow Me: Click to choose two modes, Follow Me Mode or Active Track Mode.
	Follow Me Mode: The pilot should keep a distance from the drone. Click the button, and the drone can automatically follow the pilots according to the GPS positioning of the mobile phone.
	Active Track Mode: After locking the following target, the camera is always oriented towards the following target, but the position of the drone remains unchanged. <i>(The following target should not move too fast to avoid losing the follow.)</i>
	Return to Home: The drone will return to the last recorded Takeoff Point.
	Auto Takeoff: The drone will take off automatically to a height of 5ft.
	Auto Landing: The drone will land slowly on the ground.
	Hand Gesture-Victory: Perform the Victory gesture within 3m of the drone while facing toward the camera and it will begin taking a selfie.
	Take Photo: Tap to take one photo at a time.
	Record Video: Tap once to start recording; tap again to stop recording.
	Sound Recording: The device can record the operator's voice while the camera is recording.
	Transmitter Battery Level: Real-time display of the current remaining battery level of the transmitter.
	Drone Battery Level: Real-time display of the current remaining battery level of the drone.
<p>Waiting for GPS Signal</p> <p>↑</p> <p>Drone Status</p>	<p>Speed (Meter/Sec.)</p> <p>D:00 H: 0.0 DS: 0.0 VS: 0.0</p> <p>↑</p> <p>Height (Meters)</p> <p>↑</p> <p>Distance (Meters)</p>

12.2 Beginner's Mode

The Default GPS Mode is Beginner Mode, Under Beginner Mode:


1. Flight Distance is limited between 0~30m/0~98feet.
2. Flight Altitude is limited between 0~30m/0~98feet.
3. RTH Altitude is under 25m/82feet.

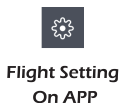

After entering the APP settings page (as shown above), pilots can turn off the Beginner Mode to enter the Advanced Mode, and modify the operation parameters.

You only can Turn-off the Beginner Mode to modify the parameters in the APP on your phone after you complete the Compass Calibration operations.

12.3 Speed Switch

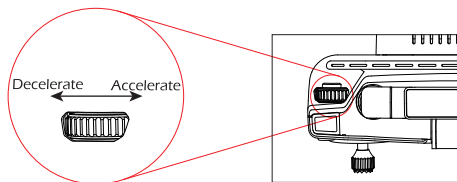


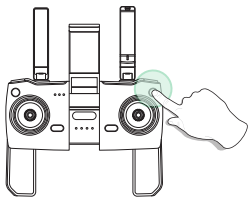
This drone has 3 speed modes (Low/Medium/High). Dial the wheel ( SPEED ) to the right to accelerate. Dial to the left to decelerate.


If the Speed Status Light on the transmitter is turned off, it means the drone is in low speed. If the light is turned on, it means the drone is in medium speed. If the light is blinking, it means the drone is in high speed.

(The Medium speed is the default speed mode.)


12.4 Emergency Stop


 **The Emergency Stop function should only be used in an emergency during the flight to avoid any damage or injury.**





Press and hold the One Key Takeoff/Landing button () for 2 secs, the motors will stop immediately and the drone will fall directly. Be aware that you risk breakage of the drone if it falls from a large distance or hits anything at a high rate of speed.

12.5 Trimmer Function (Trim under NO GPS Mode)

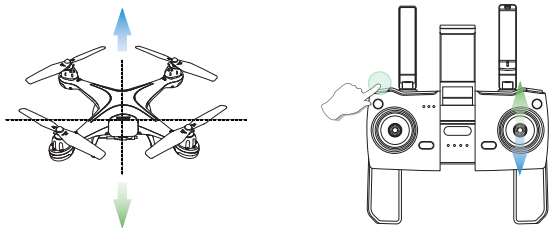


F/B Sideward Fly Trim: If the drone drifts forward, press down the Trimmer button () and do not release it while pushing the right joystick down to balance the drone. If the drone drifts backwards, press down the Trimmer button and do not release it while pushing the right joystick up to balance the drone.

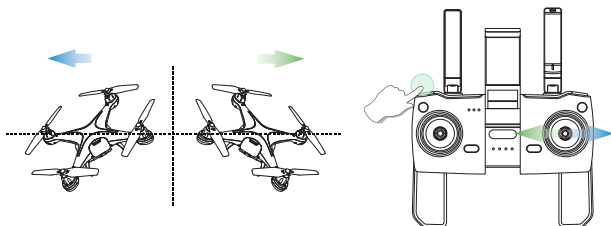




L/R Sideward Fly Trim: If the drone drifts left, press down the Trimmer button () and do not release it while pushing the right joystick right to balance the drone. If the drone drifts right, press down the Trimmer button and do not release it while pushing the right joystick left to balance the drone.

12.6 Headless Mode

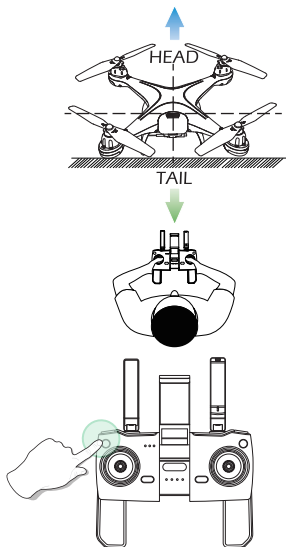! Please familiarize yourself with the Headless Mode function first before using this mode. Otherwise, it is easy to lose the drone and cause unnecessary loss.



1. Short press the Headless Mode button () on the transmitter. You will hear one beep, and the Headless Mode Indicator on the transmitter lights up, which indicates that the drone has entered Headless Mode.
2. Short press the Headless Mode button () again. You will hear a long beep, and the Headless Mode Indicator on the transmitter is off, which indicates the drone has exited the Headless Mode.

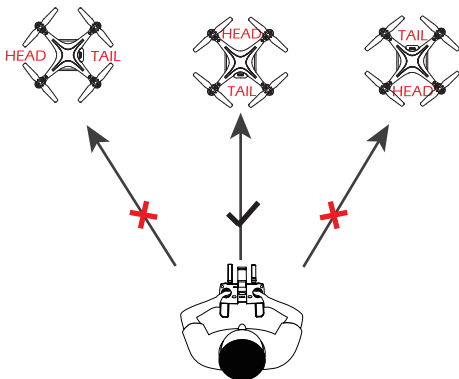

**Please make the pilot stays facing the same direction
that the drone head faces at takeoff.**

While in Headless Mode, pushing the right joystick forward will make it fly in the direction that the head of the drone faces when it takes off. To make sure the pilot can tell the drone's direction during the flight, we recommend that pilot stays facing the same direction that the drone head faces at takeoff. By doing so, it is ensured that when the pilot pushes the right joystick forward/backward, the drone will fly forward/backward toward the pilot. If the pilot pushes the right joystick left/right, the drone will move left/right relative to the pilot.


12.7 Return to Home (RTH)

The Return to Home (RTH) function brings the drone back to the last recorded Takeoff Point. It can only be activated in GPS mode. There are three types of RTH:

Smart RTH/Low Voltage RTH/Fail-safe RTH.

12.7.1 Smart RTH

Press the Return to Home button () on your transmitter, and the transmitter will start beeping.

Your drone will return to Takeoff Point. Press the button () again to stop RTH procedure, and push the left joystick down to land the drone on a safe area.

12.7.2 Low Voltage RTH

Low Voltage RTH will be automatically triggered when the drone battery level is low. Once the Low Voltage RTH is activated, the drone can only fly within a safe range where the max flight height and distance are limited to 98 feet. When the power of the drone is completely empty, the drone will return to the Takeoff point.

12.7.3 Fail-safe RTH

Fail-safe RTH will be triggered when the transmitter loses connection with the drone for more than 6 seconds. The drone will automatically start the return procedure and fly back to the last recorded Takeoff point. Once the connection is restored, the transmitter will rebind with the drone, and you can control the drone again.



- Please fly in an open, outdoors space.
- This drone is NOT equipped with obstacle-avoidance.

13.0 SPECIFICATIONS

DRONE

Model: HS110G

Weight: 195g/6.88oz

Max Flight Time: 13minutes (per battery)

Motor Model: 1020

Operating Temperature Range: 32° to 104°F

Dimensions: 306 x 192 x 90 mm

DRONE BATTERY

Capacity: 1500 mAh

Voltage: 3.7V

Battery Type: Lithium-ion Polymer Battery

Charging power: 5.55W

Charging Temperature Range: 41° to 104°F (5° to 40°C)

Charging Time: about 120 mins

TRANSMITTER

Operating Frequency: 2452-2474MHz

Max Flight Distance: 1312 feet/400m(outdoors and unobstructed)

Battery Type: 3.7V 300mAh Lithium-ion Polymer Battery

Charging Time: about 50 mins

Operating Temperature Range: 32° to 104°F

CAMERA

Operating Frequency: 2417MHz

Photo Resolution: HD1920×1088P (stored in TF card)

HD1920×1080P (stored on mobile phone)

Video Resolution: HD1920×1080P@25fps (stored in TF card)

HD1280×720P@25fps (stored on mobile phone)

Lens: FOV120°

Max Transmission Distance:492feet/150m(outdoor and unobstructed)

Photo Formats: JPEG/JPG

Video Formats: AVI/MP4

Supported TF Cards: Supports a TF Card (Class 10 above) with
the capacity of up to 128 GB (Not included)

File System: FAT32

Operating Temperature Range: 32° to 104°F


USB CHARGING CABLE

Input: 5 V/1A

Rated Power: ≤5 W

14.0 CONTACT US

Please do not hesitate to contact us if you need further support.

 4:00 PM ~ 7:00 AM (PST)

 usa@holystone.com (America)
ca@holystone.com (Canada)
eu@holystone.com (Europe)

 +1(855) 888-6699



For online support, please scan
this code with Live Chat

15.0 GENERAL INFORMATION

FCC Notice:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

The Supplier's Declaration of Conformity is available at the following address:

https://www.holystone.com/Download/US/HS110G_FCC_sDoC.pdf

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body. This part belongs to the drone.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. This part belongs to the transmitter.

IC Notice:

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

CAN ICES-003 (B)

Avis d'Industrie Canada

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

CAN NMB-003 (B)

RF Exposure

Radiation Exposure Statement:

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance. The minimum distance from body to use the device is 20cm.

Le présent appareil est conforme

Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et compliance d'acquérir les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20cm.

HOW TO RECYCLE THIS PRODUCT

This symbol on the product or its documentation indicates that it must not be disposed of together with household waste.

Uncontrolled waste disposal may harm the environment or human health. Please separate your device from other types of waste to recycle it responsibly. This will help to foster the sustainable re-use of material resources.

We invite you to contact your retailer or inquire at your local town hall to find out where and how the drone can be recycled.

BATTERY WARNING:

1. Failure to follow all the instructions may result in serious injury, irreparable damage to the battery and may cause a fire, smoke or explosion.



2. Always check the battery's condition before charging or using it.

3. Replace the battery if it has been dropped, or in case of odor, overheating, discoloration, deformation or leakage.

4. Never use anything other than the approval LiPo charger the battery. Always use a balancing charger for LiPo cells or a LiPo cell balancer. It is recommended that you do not to use any other charger than the one provided with the product.

5. The battery temperature must never exceed 60°C (140°F) otherwise the battery could be damaged or ignite.

6. Never charge battery on a flammable surface, near flammable products or inside a vehicle (preferably place the battery in a non-flammable and nonconductive container).


7. Never leave the battery unattended during the charging process. Never disassemble or modify the housing's wiring, or puncture the cells. Always ensure that the charger output voltage corresponds to the voltage of the battery. Do not short circuit the batteries.

8. Never expose the LiPo battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C (car in the sun, for example).

9. Always keep it out of reach of children.

10. Improper battery use may result in a fire, explosion or other hazard.

11. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision.

12. Different types of batteries or new and used batteries are not to be mixed.
13. Batteries are to be inserted with the correct polarity.
14. The supply terminals are not to be short-circuited. Regular examination of transformer or battery charger for any damage to their cord, plug, enclosure and other parts and they must not be used until the damage has been repaired.
15. The packaging has to be kept since it contains important information.
16. This toy should only be connected to the equipment with symbol Class II. 

EU RF Power (EIRP): <16 dBm (2452MHz ~ 2474MHz)

Caution

1. The max operating of the EUT is 45°C. and shouldn't be lower than -10°C.
2. The device complies with RF specifications when the device used at 0mm from your body.
3. Declaration of Conformity.

We, Xiamen Huoshiquan Import & Export CO., LTD hereby, declare that the essential requirements compliance with the Directive 2014/53/EU, the RoHS Directive 2011/65/EU and Safety Directive 2009/48/EC have been fully fulfilled on our product with indication below:

Product Name: REMOTE CONTROL MODEL/RADIO CONTROLLED

Model/Mark: HS110G/HOLYSTONE

The Statement of compliance is available at the following address:
http://www.holystone.com/Download/CE/HS110G_EU_DOC.pdf
This product can be used across EU member states.

MANUFACTURER INFORMATION

Manufactured by

Xiamen Huoshiquan Import & Export CO.,LTD

Address: Unit 1, Room 501, Hongxiang Building, No.258 Hubin Nan Road,
Siming District, Xiamen, China

+1(855) 888-6699



MADE IN CHINA(CN)

